



# XS WIRELESS 1

**Quick Guide** | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Pikaohje | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

In the box	Vocal Sets		Instrument Sets		Lavalier Set	Headmic Set
	XSW 1-825	XSW 1-835	XSW 1-C11	XSW 1-908	XSW 1-ME2	XSW 1-ME3
<b>XS WIRELESS 1</b> 	•	•	•	•	•	•
<b>EM-XSW 1</b> 	•	•	•	•	•	•
	•	•	•	•	•	•
	•	•	•	•	•	•
<b>MZQ 1</b> 	•	•	•	•	•	•
	•	•	•	•	•	•
<b>SK-XSW</b> 	•	•	•	•	•	•
<b>e 908T</b> 	•	•	•	•	•	•
<b>ME 2-2</b> 	•	•	•	•	•	•
<b>ME 3-II</b> 	•	•	•	•	•	•
<b>CI 1-N</b> 	•	•	•	•	•	•
<b>2 x AA LR6 1.5 V</b> 	•	•	•	•	•	•

### Battery

- Slide the battery cover open.
- Insert the battery with the correct polarity.
- Slide the battery cover closed.

### Low Battery

Bank 1 Ch. 1  
925.300 MHz

- ~ 10 h
- ~ 7 h
- ~ 3 h
- Low Batt

### Setup

**XLR-3** OR **6.3 mm**

Line Mic

EU US UK AU CN KOR

ME 2-2 e 908T ME 3-II CI 1-N

### On/off

1s on 3s off

OR

OR

### Display

EM-XSW 1

Bank 1...8 Channel 0...9

Sensitivity Sync Low battery

### Volume

0...9

### Mute

Audio on

Audio off

Sennheiser electronic GmbH & Co. KG

### Change frequency

**Automatically/Scan**

1. Turn the device **Off**.
2. Press **Set / Scan** for 3s.
3. The display shows **23**.
4. Press **Set / Scan** again. A green checkmark indicates success.

**Manually**

Bank Channel

1. Press **Set / Scan**.
2. The display shows **13**. Press **CH+** to change the channel.
3. The display shows **23**. Press **Set / Scan**.
4. The display shows **23**. Press **Set / Scan** again.
5. A green checkmark indicates success.

### Sync

Warning: Do not sync with a device that is not in Sync mode (indicated by a red 'X').

1. Press **hold** on the transmitter. The display shows **Sync**. Press **hold** on the receiver. The display shows **23**. A green checkmark indicates successful sync.
2. Press **1x** on the transmitter. The display shows **23**. A green checkmark indicates successful sync.

OR

Bank Ch. 1 1 925.300

Bank Ch. 2 3 929.100

### Sensitivity

Level: 0 dB, -10 dB, -20 dB, -30 dB

Level indicator: Green (OK), Red (X)

OR

Microphone sensitivity: 10, 20, 30 dB

### Multichannel

Bank 1...8  
Ch. 0...9

max. 10 ch.

Bank	CH.	Bank	CH.	Bank	CH.	Bank	CH.	
23	24	25	26	✓				
11	12	13	18	✓				
23	13	47	89	✗				
23	23	23	23	✗				

### ME 2-2

25 cm (10")

### ME 3-II

2...3 cm (1")

### Min. distance

> 5 m (16'5")

### SKM

### Guitar pickup

> 20 cm (8")

### Squelch

min. SQ

max. SQ

